



MacBook Pro 13" Retina Display Early 2015 Trackpad Cable Replacement

Prereq only

Written By: Sam Lionheart







TOOLS:



- [T5 Torx Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Trackpad Cable

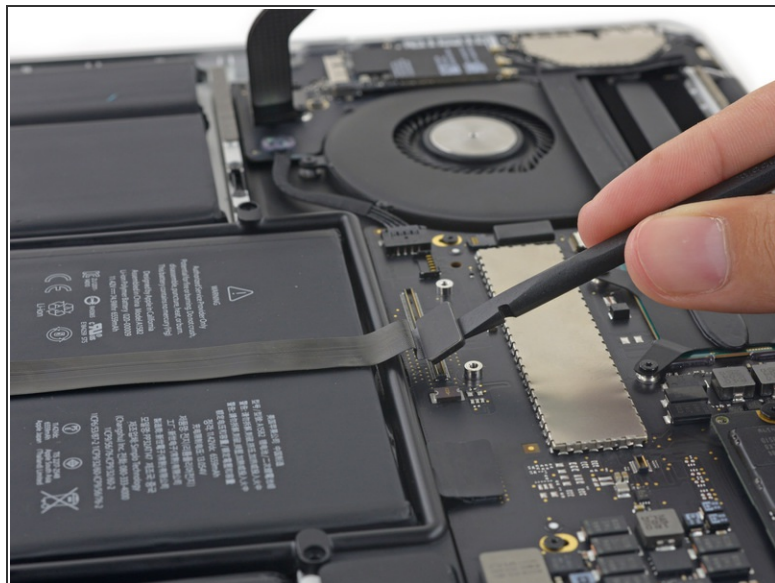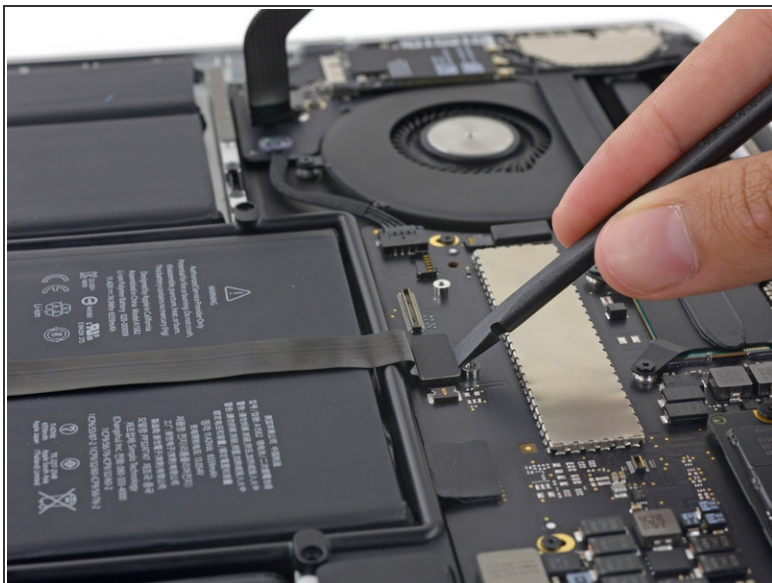

- Use the flat end of a spudger to pop the trackpad connector straight up off its socket on the logic board.

Step 2

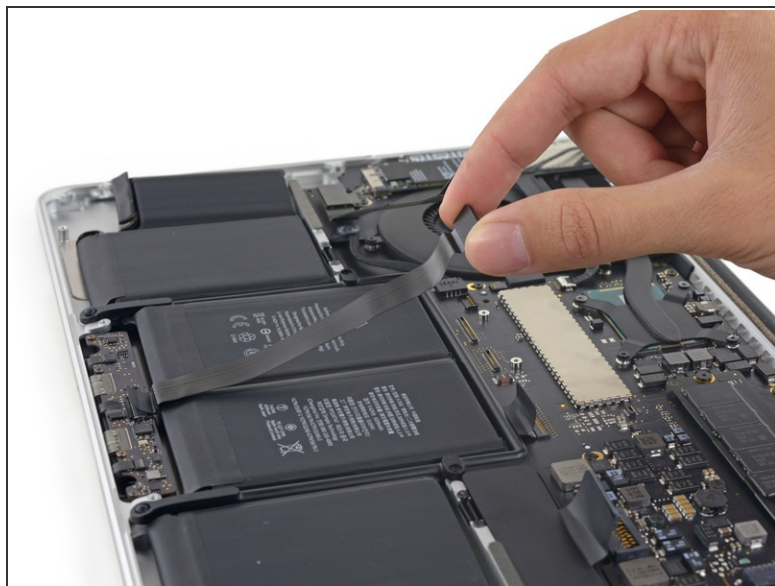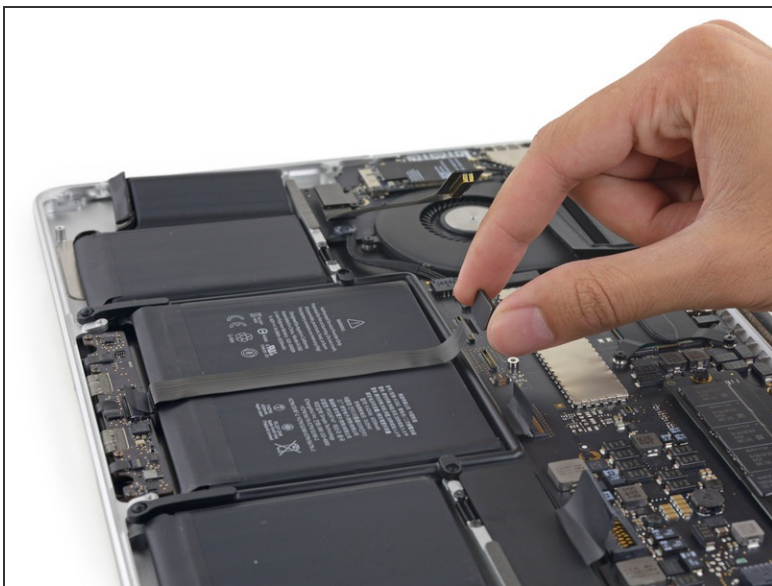

- Lift the trackpad cable up off the battery to separate it from the adhesive securing it.

Step 3



i If necessary, peel back any tape covering the trackpad cable connector.


- Use the end of a spudger to flip the retaining tab on the ZIF connector.

Step 4



- Pull the trackpad cable straight out of its ZIF socket on the trackpad control board.

Step 5

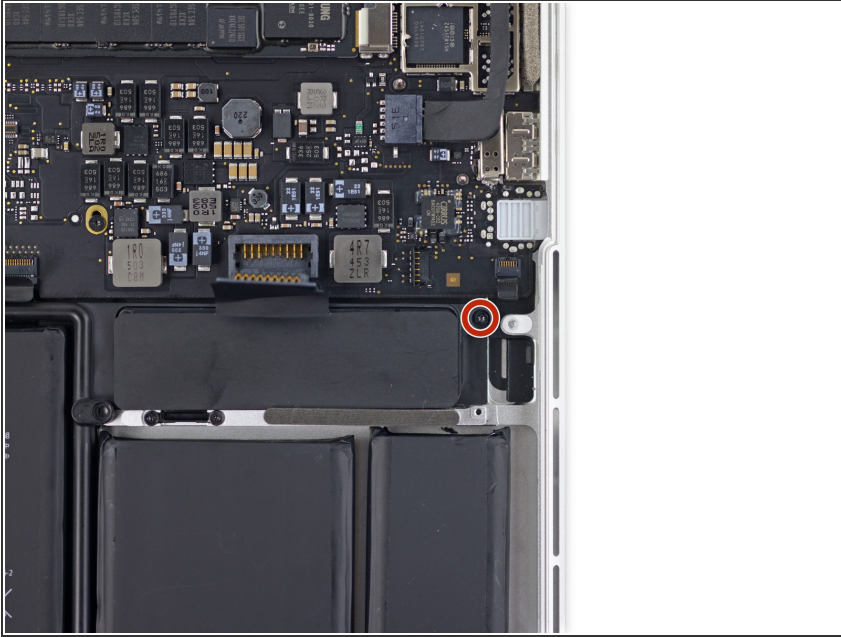

- Remove the single 3.7 mm T5 Torx screw securing the battery board to the upper case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-10 09:56:25 AM.